

The NADAMOO Bur3074 is a handheld laser scanner that comes with a stand and lets you easily scan a book, music or video by simply holding the item under the scanner, barcode facing up.

The scanner operates in wired or wireless modes with included USB cable and USB receiver

Some assembly is required, you do have to assemble the stand, no tools are needed. Then just plug the USB connector into any available USB port on your computer, keyboard, monitor or router.

No drivers are needed, just plug it in and scan. Works with Windows, Linux and macOS.


You configure the scanner by scanning special barcodes which are included in the manual. For your convenience we are including the configuration barcodes needed to use the scanner with Readerware.

The scanner can operate in trigger mode or continuous mode. In trigger mode you have to pull the trigger to scan. In continuous mode you just hold the barcode under the scanner. When using continuous mode we think it works better using the wired connection, so this document is set up that way. If you want to use it in wireless mode, please consult the manual that came with your scanner.

Refer to your manual for installation instructions.

One time setup

There is a one time setup you need to do to configure your scanner for use with Readerware. If the scanner ever has problems, repeat the setup to reset your scanner.

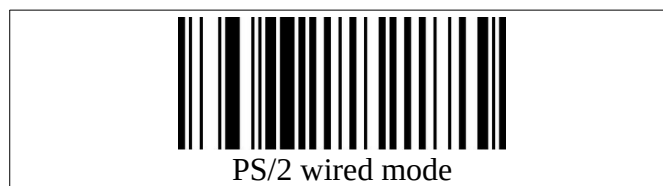



Scanner Modes

