

The ARM 32-bit Cortex is a low cost wired laser barcode scanner..

No drivers are needed, just plug it in and scan. Works with Windows, Linux and Mac OS X.

You configure the scanner by scanning special barcodes which are included in the manual. For your convenience we are including the configuration barcodes needed to use the scanner with Readerware.

Refer to your manual for installation instructions.

One time setup

There is a one time setup you need to do to configure your scanner for use with Readerware. If the scanner ever has problems, repeat the setup to reset your scanner.

